


Materials Needed for Assembly

Item No.	Description of Material/Part	Quantity
1	Quik Foot	1
2	Fastener (Length to be determined)	2
3	Quik Foot Flashing	1
4	EPDM Washer	1
5	L-102-3" Bracket * (other options available)	1
6	5/16" EPDM Bonded 18.8 SS Washer	1
7	3/8" Stainless Steel Hex Nut	1

Required Tools

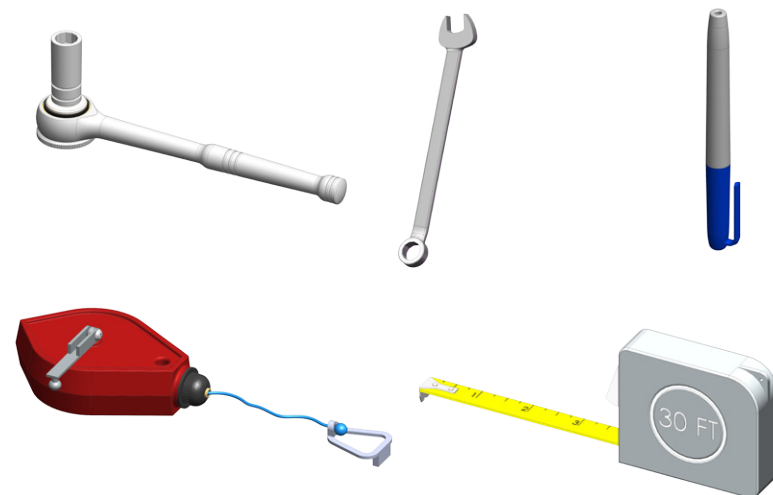

EcoFasten Solar