


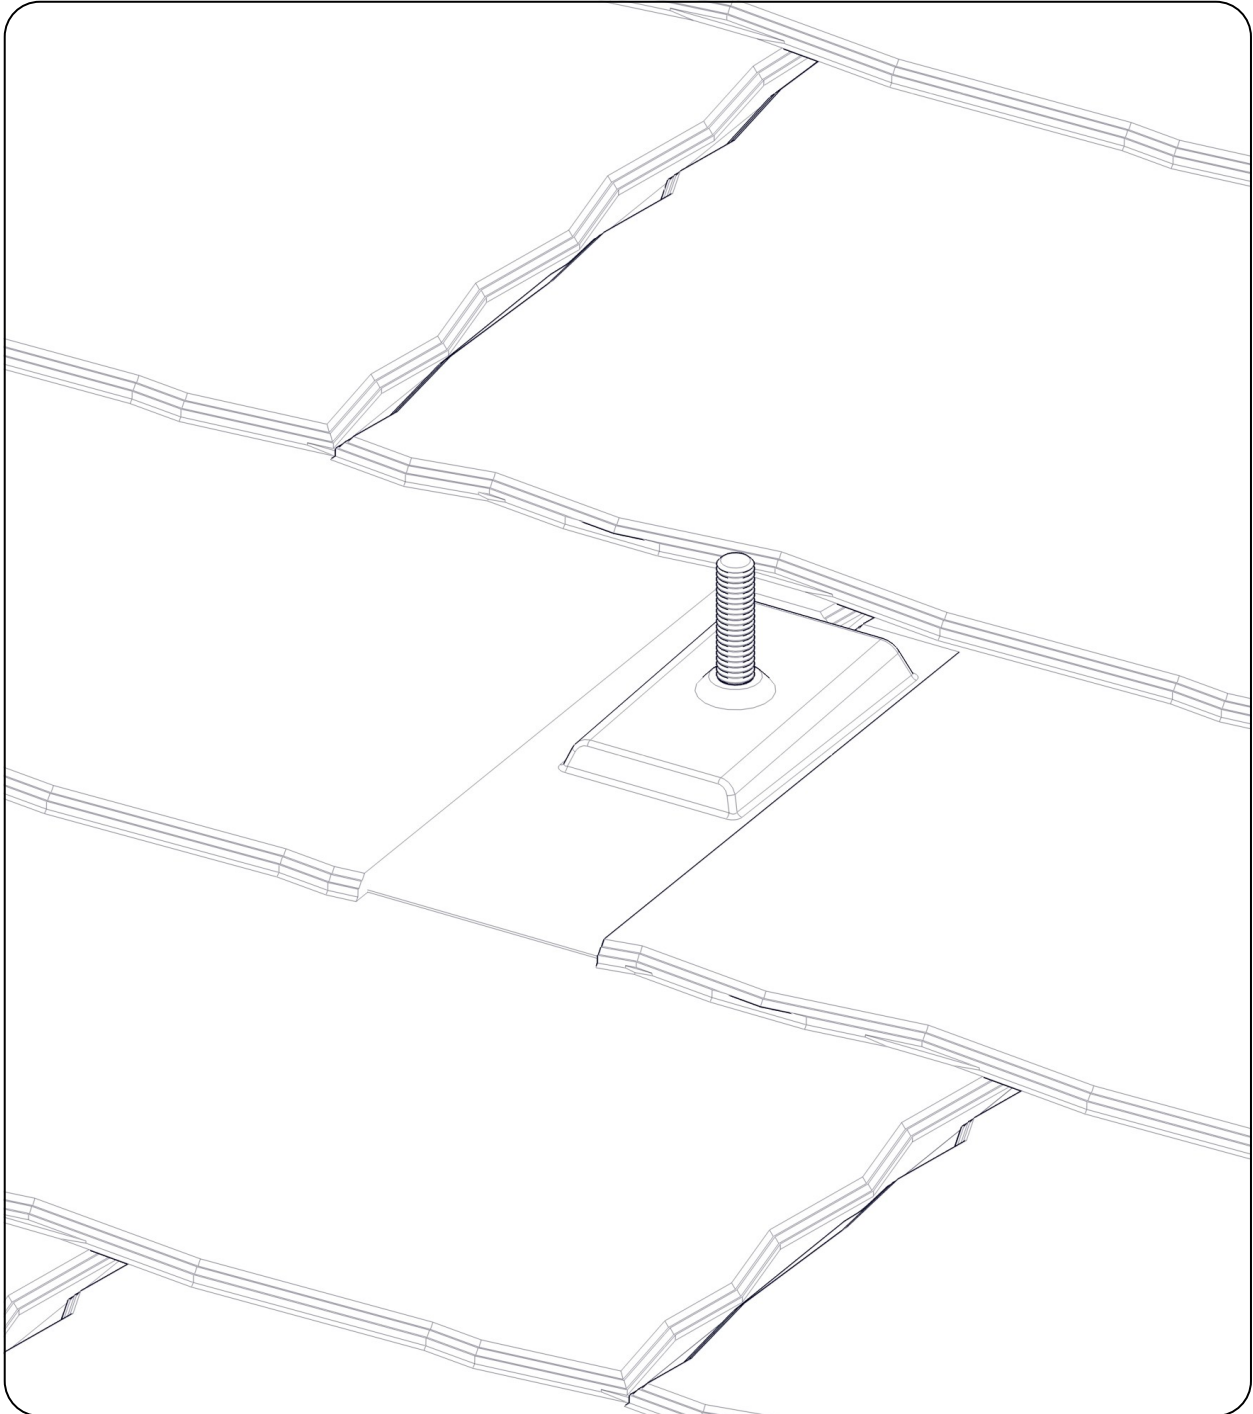


Quik-Foot Slate Roof Installation Manual




Step 1

Determine desired install location and mark the install course with a chalk line for future reference. Before you start you should also determine the general location of the rafter you will be fastening into.

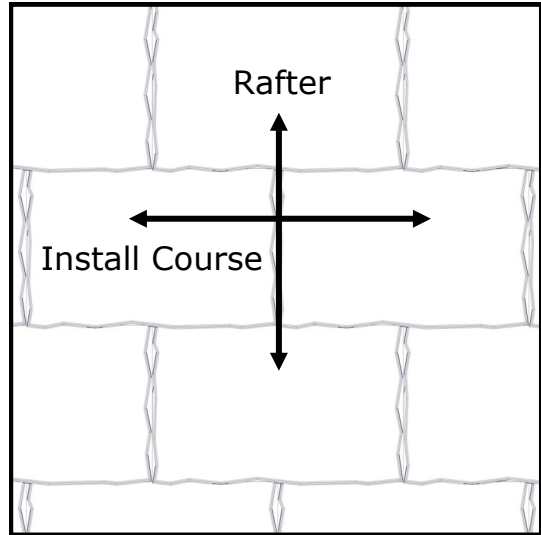


Step 2

Remove the slate surrounding your installation location.

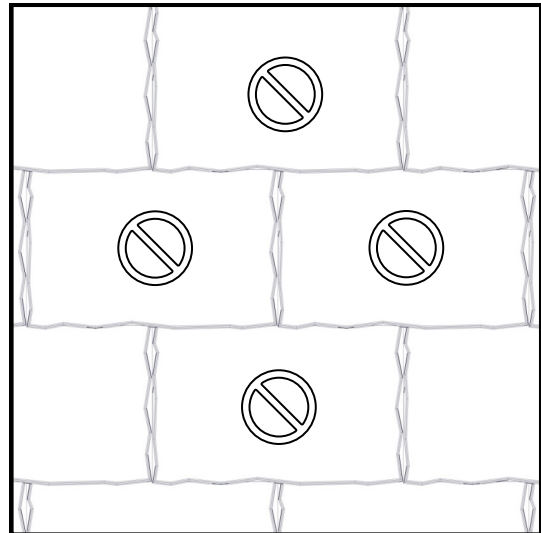

Step 3


With the surrounding slate removed, locate the rafter under the roof deck and position the Quik-Foot base plate over the rafter and just above the slate two courses below the install course.

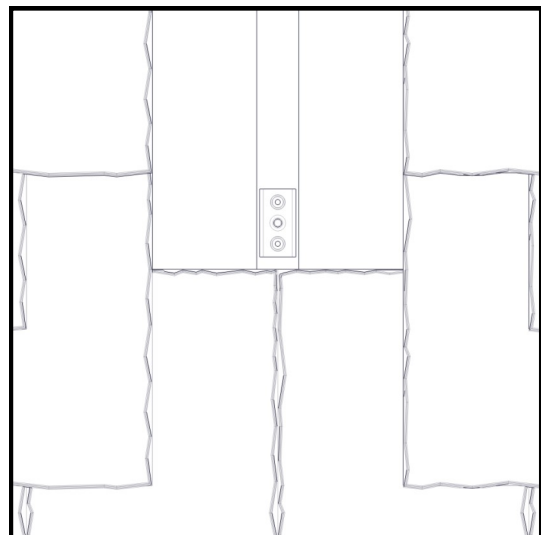

Step 4


Install the supplied screws through the Quik-Foot base plate and into the rafter. An 18v cordless drill works best for this procedure.

Note: Set the clutch on the drill so that you do not over tighten the screw and strip out the threads.

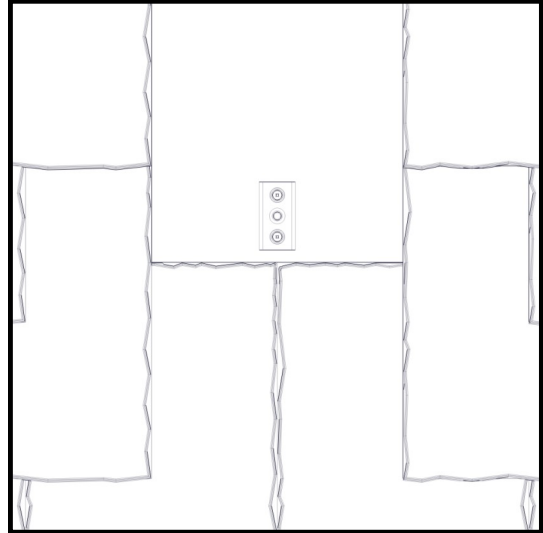


Step 5

Replace the slate you removed from the course below the install course, cut the slate as needed so that the slate fits around the Quik-Foot base plate.

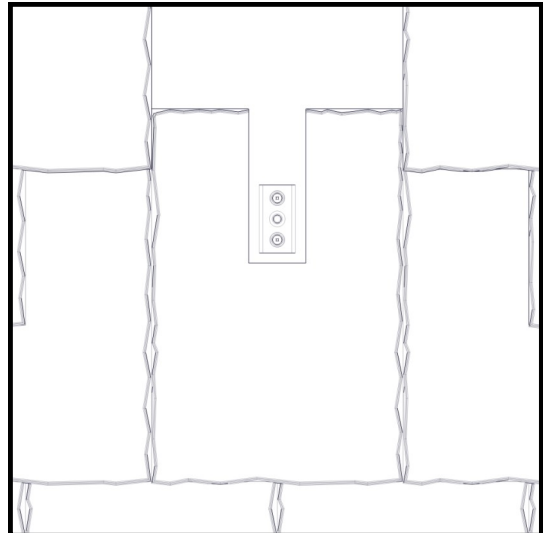


Step 6

Add the included Quik-Foot shims until the overall height is equal to or just above the top surface of the install course.

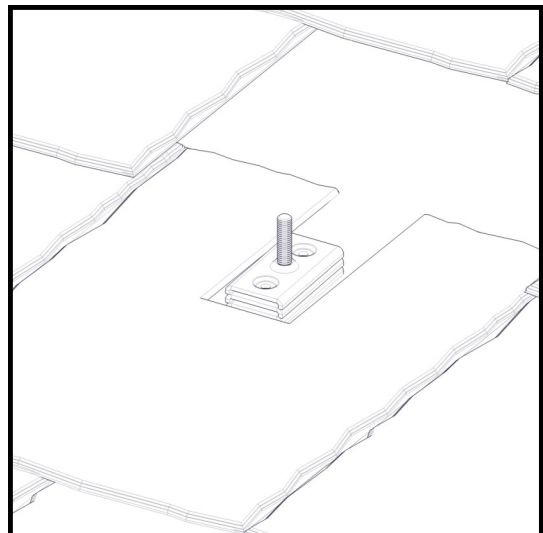


Step 7

Install the flashing.

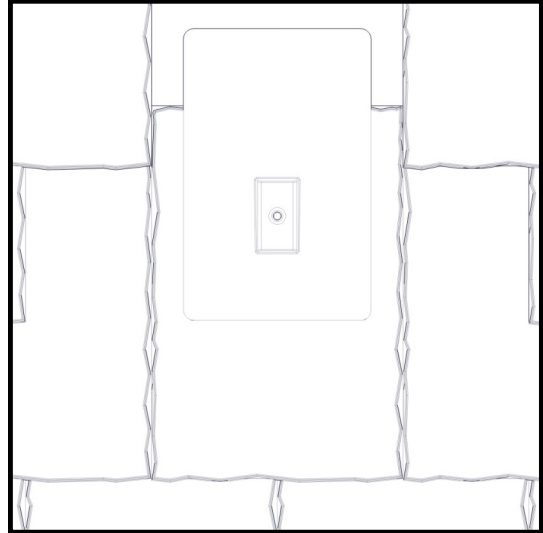

Step 8

Replace the slate you removed from the install course, cut the slate as needed so that it fits around the Quik-Foot base plate.

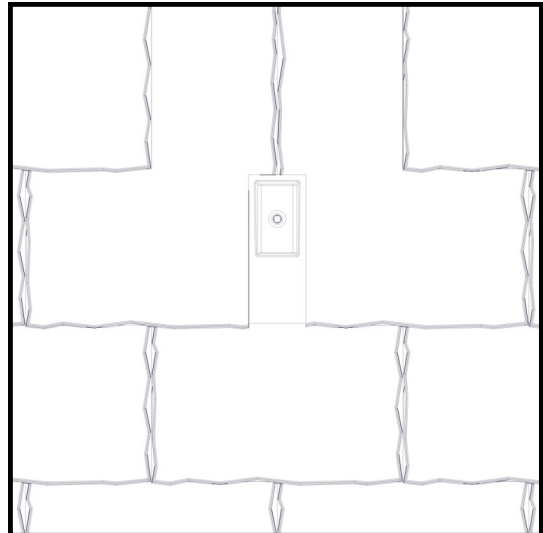

Step 9

Replace the remaining slate from the course above the install course.

