


CLICKFIT[®]

CLICKFIT SMART FOOT

Introducing our fast installing Smart Foot! Created for use with our rail-based ClickFit System, the mount easily attaches onto composition shingle roofs. Fabricated from cast aluminum, the ClickFit Smart Foot features our proprietary UltraGrip Technology™. A layer of cushioning foam helps to embed the waterproofing sealant deep into the granules of the shingle and flexibly conform over the steps found on architectural-style shingles. Simply peel the backing off the release liner from the underside of the UltraGrip pad and place the mount on the shingles. The mount comes packaged with the ClickFit “Clicker”. Screws are sold separately.

Features & Benefits

- Integrated flashing utilizes **UltraGrip Technology™** to create a watertight seal
- Multiple opportunities to find the rafter
- Eliminate the need to drill pilot holes
- No sealant required for most installations
- No need to add adhesive shims for shingle leveling
- Built-in alignment guide for fast “Clicker” leveling

ALIGNMENT GUIDE



CLICKFIT SMART FOOT & CLICKER

Required Components:

Part Number:	Description:
2012028	CF SMART MNT W/CLKR AL MLL
3016018	SCREW #14X3 W/BW




CLICKFIT SMART FOOT

Integrated UltraGrip Technology™

Pre-installed sealing pads are compatible with all composition shingle roofs and can be installed in ambient temperatures as low as 5 degrees. The compression achieved when fastened to the roof creates a super strong watertight seal. In most cases, Smart Foot can be mounted to the deck without the need for sealant. A layer of flexible foam provides cushioning, which allows the super-sticky waterproofing sealant to embed deep into the granules of the shingle as well as to flexibly conform over the steps found on architectural-style shingles. The flexible foam also works in concert with the bonded sealing washer to absorb the daily movements caused by thermal expansion and contraction, preventing the mount from damaging the shingles.



A layer of flexible foam pushes the sealant deep into the shingle granules and around shingle steps

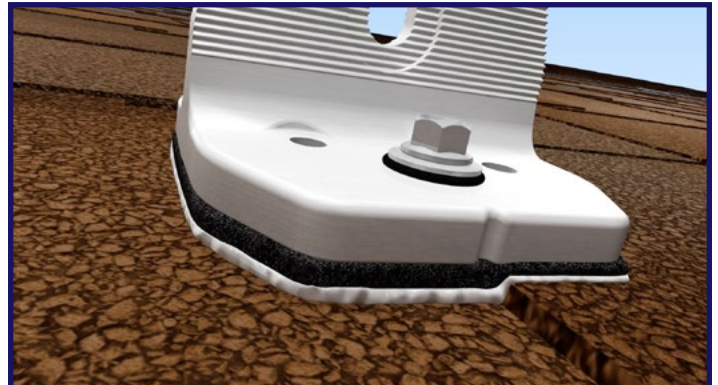

ClickFit Smart Foot can be installed on top of architectural shingle steps

Testing & Documentation

- [Florida Product Approval](#)
- [ClickFit Installation Manual](#)
- [ClickFit CutSheets](#)

